

## HOW TO ACTIVATE SHADE

- Sonesse ULTRA 30 / Sonesse 28
- Sonesse 40 Wirefree RTS
- Roll Up 28 / 24




The motorized shade has **already** been programmed to the remote.

*For shipping purposes, the motor has been disabled. Follow steps to activate.*

### TO ACTIVATE:

1. Plug in the charger (preferred method)  
**OR** Briefly press the programming button
2. The shade will move UP and DOWN once and the green LED will blink
3. **Now the motor will respond to the remote.**

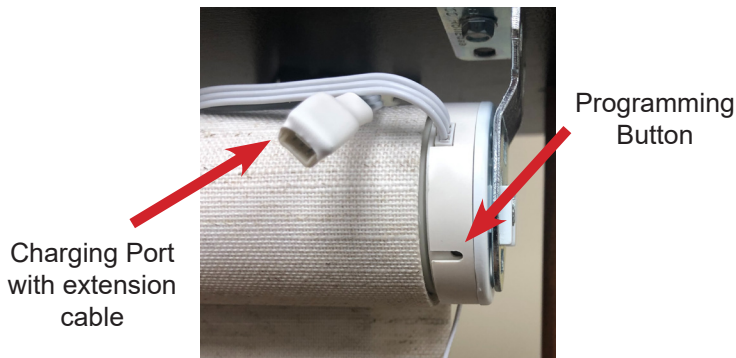

Scan the QR code for a video tutorial of activating the motor.

English



Spanish

