

## FMS TRACK INSTALL INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

### Getting Started:

Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:

- Track(s)
- Master carrier(s) & carriers (pre-installed within track)
- Mounting brackets
- Splice, if requested

### Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure
- Hack saw (optional)

### Wall Mount Instructions:

#### Installing Your Drapery Track:


You are now ready to install your Forest Drapery Track System.

#### 1. Measure

Determine the height of the top of track and mark bracket height on the wall for all the brackets and adjust (as necessary) to make sure they are all leveled.


#### 2. Mark

Measure the width of the track and mark the two end brackets approximately 3" - 4" in from the ends of the track. Evenly space the remaining brackets and place corresponding marks.

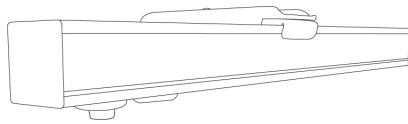


#### 3. Mount

To attach the bracket to the wall; first pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.

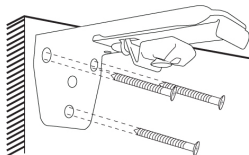


#### 4. Attach Bracket

Place the track into the bracket as shown in the drawing; applying pressure until track "clicks" into bracket. Make sure track set screw is loose enough to allow the track retainer to flex. Repeat this step for the remaining brackets.

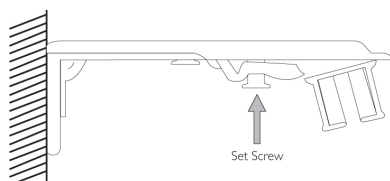


#### 5. Tighten

Tighten track set screws on all the brackets to secure track to brackets.

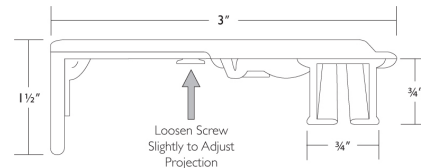

#### 6. Adjust Projection

Adjust track to the desired projection. Projection is adjustable from 3" - 4 1/2". Repeat this step for the remaining brackets.

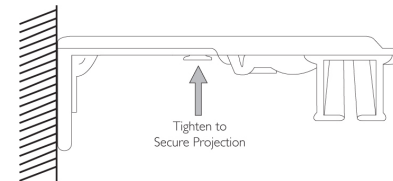


Once desired projection is set for all the brackets, lock the bracket into position by tightening the track depth adjustment set screw (see drawing below).

### Installing Splice, if requested:

For wide areas, tracks will be shipped in multiple pieces and will require a splice.

- Slide the track of the connecting ends on each track into the channel of the splice and butt ends together.
- Tighten locking screw with hex key for a secure fit.

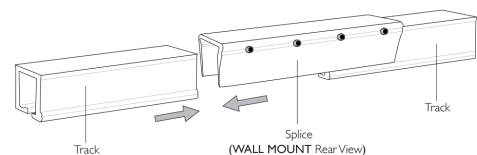

## FMS TRACK INSTALL INSTRUCTIONS (CONTINUED)

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

### Ceiling Mount Instructions:

#### Installing Your Drapery Track:

You are now ready to install your Forest Drapery Track System.

##### 1. Measure


Measure the width of the track and mark the two end brackets approximately 3" - 4" in from the ends of the track. Evenly space the remaining brackets and place corresponding marks.

##### 2. Mount

To attach the bracket to the ceiling; first pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.


##### 3. Attach Bracket

Place the track into the bracket as shown in the drawing; applying pressure until track "clicks" into bracket. Make sure track set screw is loose enough to allow the track retainer to flex. Repeat this step for the remaining brackets.

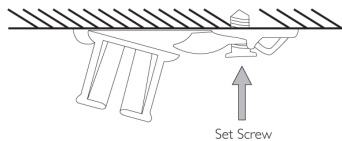

##### 4. Tighten


Tighten track set screws on all the brackets to secure track to brackets.

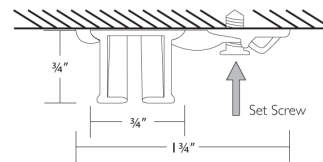

#### Installing Splice, if requested:

For wide areas, tracks will be shipped in multiple pieces and will require a splice.

- Slide the track of the connecting ends on each track into the channel of the splice and butt ends together.
- The tracks will snap together. Press together and confirm a tight fit.
- Secure with additional screw.

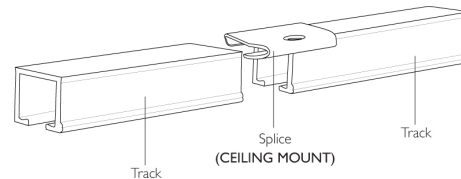

Scan this QR Code for instructions on attaching and programming your Forest Shuttle® motor.

