

## INSTALLATION INSTRUCTIONS

### Please Follow These Installation Instructions

You will need a pencil, tape measure, drill, screw driver, pair of pliers, and the appropriate fasteners. (see page 4)

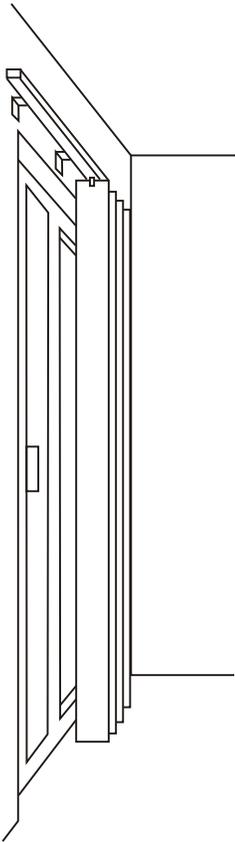


Figure 1

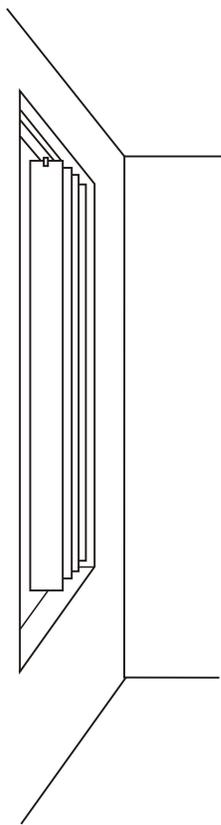


Figure 2


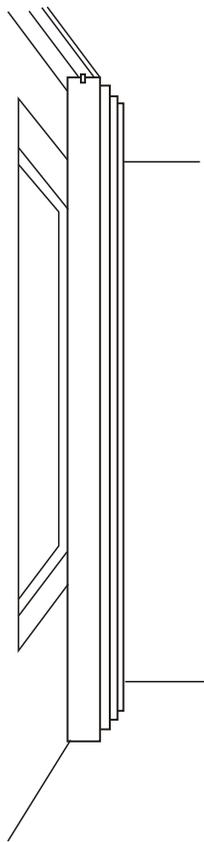


Figure 3

### Step 1 Outside Mount (figure 1)

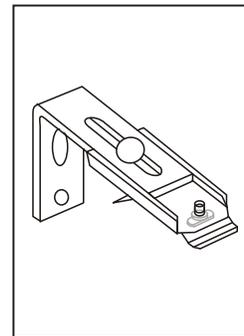


The standard bracket is adjustable between 1/2" and 1-1/2" wall clearance.

Find the height for the top of the bracket (as measured from the floor) by adding 1/2" to the blind height as provided on the headrail. When installed, louvers will clear the floor by 1/2".

Place the first bracket directly over the corner of the window with a max. of 30" between brackets. Adjust the length of the bracket so that the louvers clear all obstructions.

### Inside or Ceiling Mount (Figure 2&3) (for valance, see inside)

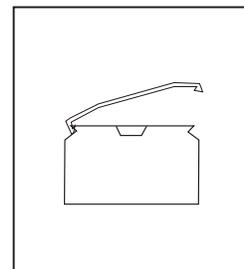


Use clip brackets mounted directly to ceiling or head.

The center of the clip bracket equals the center of the louver hook. Locate the screw a minimum of 2-1/4" in front of the window frame or any projection.

Locate clip #3 from each of the track with a maximum of 30" between clips. Allow a minimum of 1/2" clearance above sill or carpet


## Step 2 Install Headrail

Mount brackets, then snap on headrail as illustrated. To remove headrail, simply push the release lip up with a screwdriver .

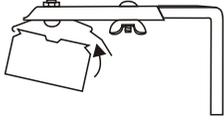

## Step 3 Attach Louvers

Push the louver into the top of the hook, then pull straight down to lock in place. Attach groover the same as above, only ensure that excessively thick insert material does not go inside the hook.

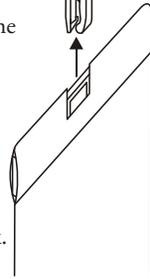

**United Supply Company**


(P) 800.334.1207 (F) 800.400.1795

[www.unitedsupplyco.com](http://www.unitedsupplyco.com)




## Shortening the Cord Length

Find the cord connector in front of the leading carrier. Loosen the cord screw . Find the cord that comes directly from the gearbox, and pull cord out until the cord guide lifts to the desired position. Tighten the cord screw, test the traversal, and cut off the excess cord.

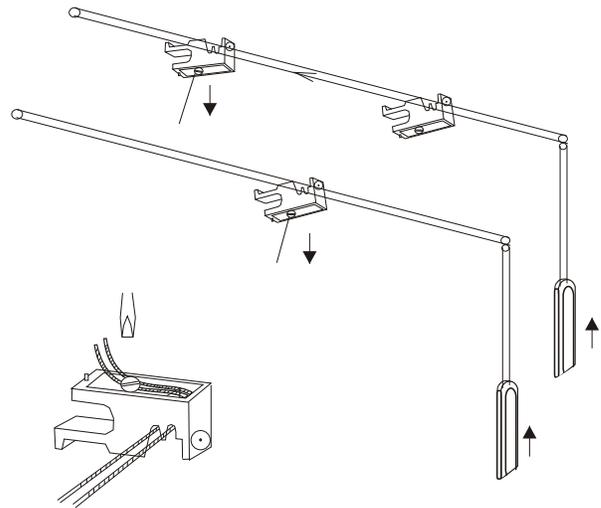


### Step 4 Test Traverse

Alternately pull the cords to see that the blind traverses smoothly in both directions.  
**CAUTION: ONLY TRAVERSE THE BLIND WITH THE LOUVERS IN THIS OPEN POSITION!**

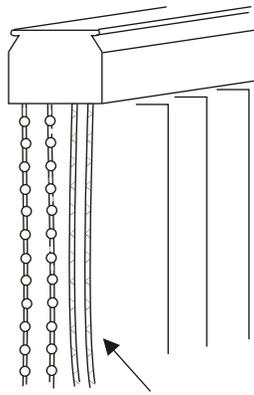



### Step 5 Test Rotation

By pulling the beaded chain once in each direction you will rotate the louvers from front to back. This will automatically align all of your louvers.

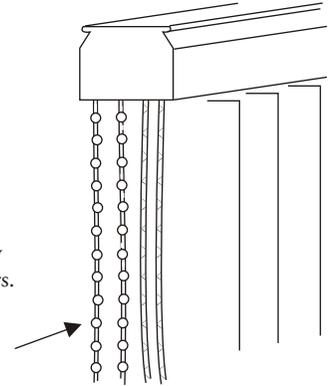


### Install Valance With Inside Installation

With ceiling mounts, simply install the headrail bracket clip mounting screw through the valance as shown. Make sure the louver will not hit the valance.

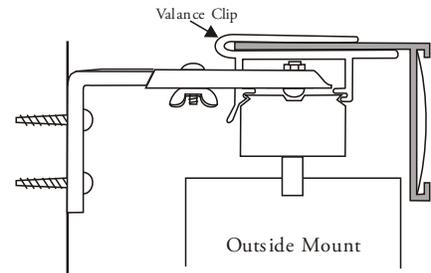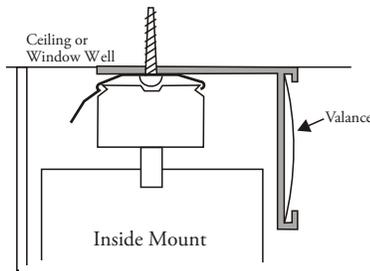

### Install Valance With Outside Installation

Snap the valance clip onto the top of the headrail. Slide valance into the valance clip. Assemble corner returns as shown. The returns may need to be trimmed to length. Use heavy duty scissors or shears.

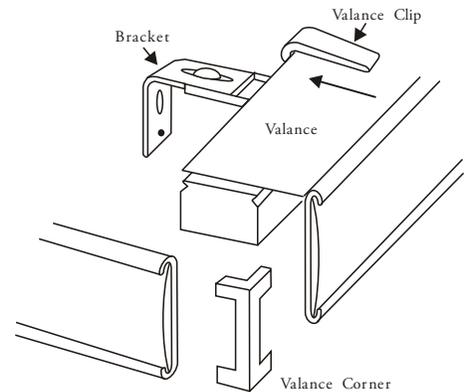

**United Supply Company**

(P) 800.334.1207 (F) 800.400.1795

[www.unitedsupplyco.com](http://www.unitedsupplyco.com)