

Arlington

Roller Shades



Standard Roller Shades Installation

Tools you will need for installation (furnished by installer): pencil, tape measure, level, drill and bits, screwdriver, and proper fasteners for surfaces where shade will be installed.

Read Instructions Before Installing Shades


Valance Options

Valances should be installed so that the working mechanism of the shade is concealed but shade operates freely.

Valance options for Pinnacle® Roller Shades are Square Corner Valance, Cassette Valance, or Fascia. If installing a shade with Cassette or Fascia refer to instructions on next page.

Square Corner Valances

Install brackets and shade as instructed. Leave shade in fully raised position. Position valance making sure to allow clearance for the fully raised shade and mark where valance will go. Attach Valance Return to valance with Corner Joint. Returns can be trimmed with scissors or utility knife for proper fit. Temporarily remove shade so that valance can be installed.

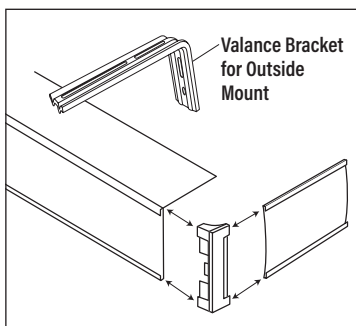


For outside mount Square Corner Valances use L-Brackets. For inside mount Square Corner Valances, screw directly through valance into mounting surface.


1. Install Mounting Brackets

Mounting brackets may be attached to window frame, window molding, wall, or ceiling. Use the proper fasteners for the type of wall or window frame where shade will be mounted (fasteners supplied by installer).


Shade brackets are reversible and can be used on either the clutch or pin end side of shade.

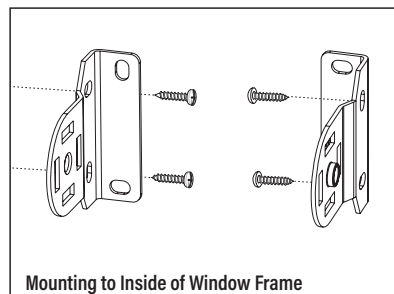

Mounting to Inside of Window Frame

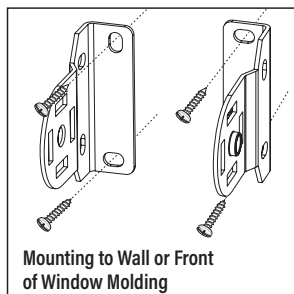


Mounting to Wall or Front of Window Molding

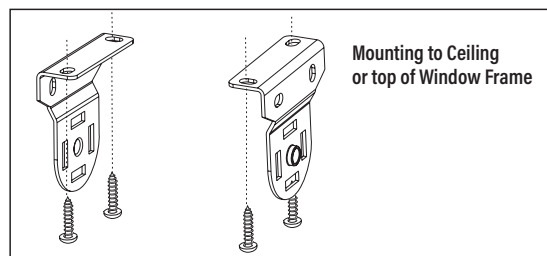

Mounting to Ceiling or top of Window Frame

2. Install The Shade

- Put the spring loaded pin into the round hole of the bracket.
- Keeping the pin end secured in the bracket, insert the hook arms on clutch straight into the two hook arm receiver holes of the bracket. Once the two hook arms are through the holes, gently pull down on the clutch until the two hook arms have locked securely to the bracket. Bottom of the clutch should always point straight down.

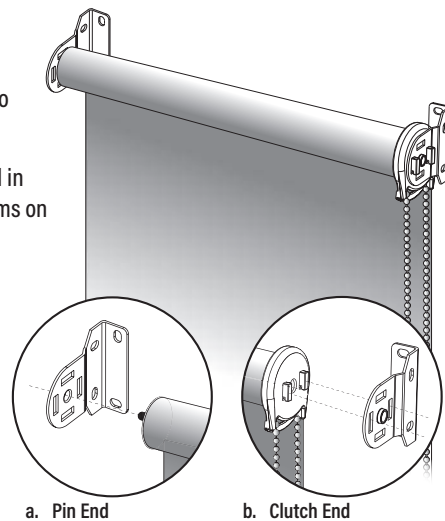


a. Pin End

b. Clutch End

If Sharing a Bracket

On side by side shades, when sharing a center bracket the bracket can only be shared by a clutch and a pin end, not clutch-to-clutch or pin end-to-pin end. Sharing a bracket will reduce light gap.

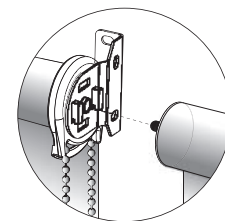

Shared Bracket

3. Install the Bracket Covers

Bracket covers slide over the bracket until snapped into position.

4. Install the Tension Device

The Tension Device reduces the hazards of strangulation and entanglement of young children by limiting access to the control cord. Anchor the Tension Device that is attached to the shade's bead cord, to the window frame or wall, so that young children cannot pull the bead cord around their necks.

Position the Tension Device on the window frame or the wall so that the Tension Device and bead cord do not interfere with raising or lowering the shade. The Tension Device should be installed without stretching or pulling down on the control. Stretching the control will cause excessive wear. Do not twist or cross the control.

Holding the Tension Device upright and flush against mounting surface, insert screws through the holes and fasten securely to solid mounting surface or with anchors (provided). If not installed properly the shade will be rendered inoperable.


Use Bead Cord or Chain to Operate Shade

Pulling gently on the bead cord in one direction raises the shade; pulling it in the other direction lowers it. On shades where the fabric rolls against the window, the front bead cord does the raising. On shades where the fabric rolls toward the room, the rear bead cord does the raising.


Cassette Installation Instructions

1. Mount the Brackets

Mount the brackets to the wall or window frame, with the outside brackets no further than 2" from the ends of the headrail. On wide shades, space the additional bracket(s) at equal intervals.

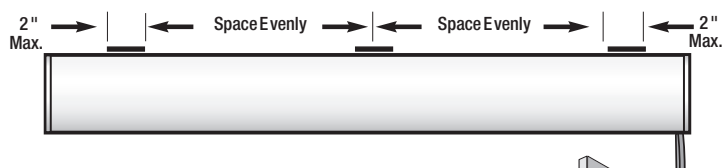


For wall or outside mounts, use the rear bracket holes.

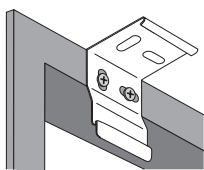

Make sure the release tab is always mounted on the bottom.


For inside or ceiling mounts, use the top bracket holes.

Make sure the release tab is always mounted on the bottom.

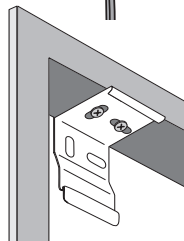

2. Mount the Headrail

Position the headrail with the front panel (A) resting on the top lip of all brackets. Push the bottom front of the headrail firmly backwards and toward the window until the lip on the rear of the headrail engages the bracket and snaps into place.

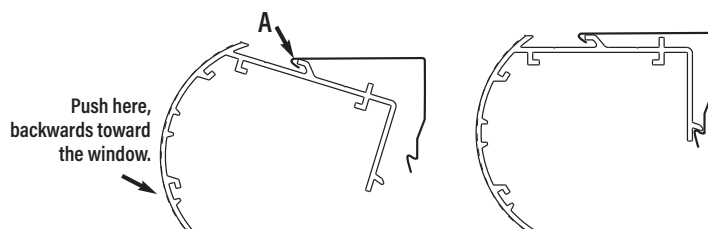

IMPORTANT:

Do not remove the wrap on the roller shade until installation is complete. Shade should remain in rolled up position to make installation easier and reduce risk of damage.

NOTE:


To remove the shade press release tab on bracket up with pressure to release the cassette. Pull down and rotate removing shade.

Installation Instructions for Shade with 3" Fascia

3" Fascia Bracket is used to install both the shade and 3" fascia.


1. Install the brackets with "Arms" at bottom.

2. Insert chain diverter into clutch side mounting bracket only. Hang the chain diverter on the brackets lower arms. Make sure the two round pins on the chain diverter seat into the two matching round holes on the bracket. **DO NOT ATTACH CORD GUARD UNTIL SHADE IS MOUNTED IN BRACKET AND CHAIN IS ROUTED THROUGH DIVERTER.**

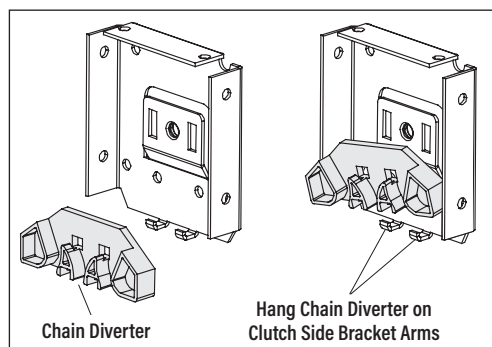


Chain Diverter is not required on 4" fascia.

3. Install the shade and route beaded cord through the back two channels. Snap the cord guard on the chain diverter (shown).

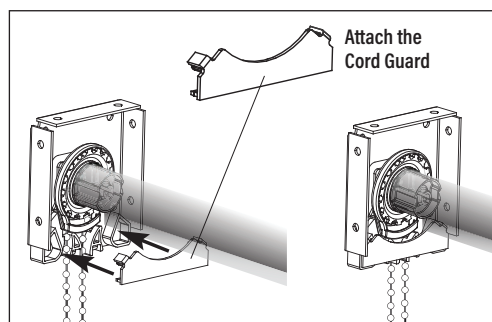


Installing Roller Shade with 4" Fascia


This bracket is used to install both the shade and 4" fascia. Pinnacle® 4" brackets include slotted mounting holes allowing pre-marking and attaching of the mounting screws without the bracket needing to be in place. See steps one through 5 below.

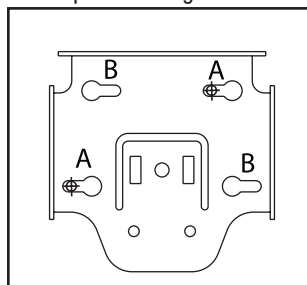


1. With bracket in position in window, mark location where screws should be in either A & A or B & B locations. Screw in fasteners loosely where marked.

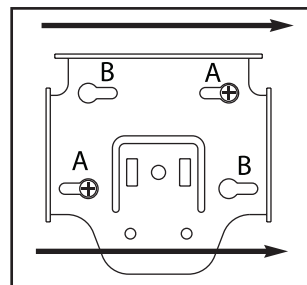


2. Slip the mounting bracket over the two screws and slide the bracket sideways until the screw heads capture the bracket.

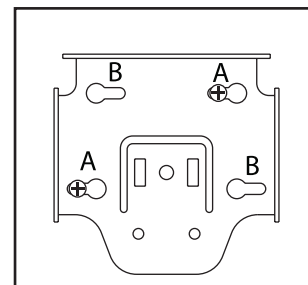


3. After step 2, screws will be seated into small end of slot in bracket. Then tighten these screws completely to secure bracket.

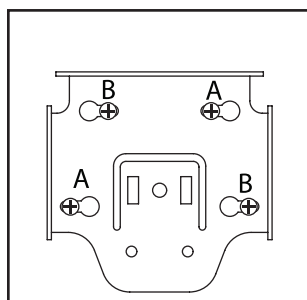

4. Install additional screws.

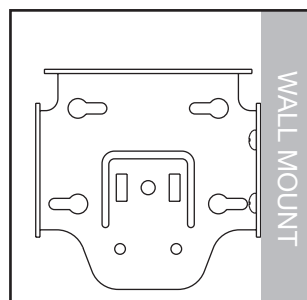

5. Bracket also contains slotted mounting holes for wall or ceiling mount.

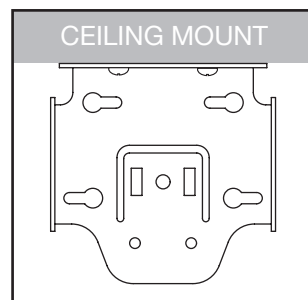

6. Install Shade into Bracket, pin end first, applying pressure so the clutch end will seat into opposite bracket.

7. Insert tab of Fascia Clip into the bottom hole in the bracket as shown. With your thumb, push until you hear a click.

8. To attach Fascia, hook flange (8a) into the top of each bracket. Pivot fascia down and snap flange (8B) into fascia clip at bottom of each bracket.

9. If outside Mount, add Bracket Covers to brackets.

